



## **700 Single Door Screen – Reveal fitting**


Your screen will be supplied with the following components

- 1 x assembled head cassette
- 1 x closing channel
- 1 x top guide
- 1 x bottom guide (40mm or 22mm deep as selected)
- Screws
- Rawl plugs
- Cover caps (if required)

Please follow the instruction below and if you need any help call us on 01628 481919



## Introduction

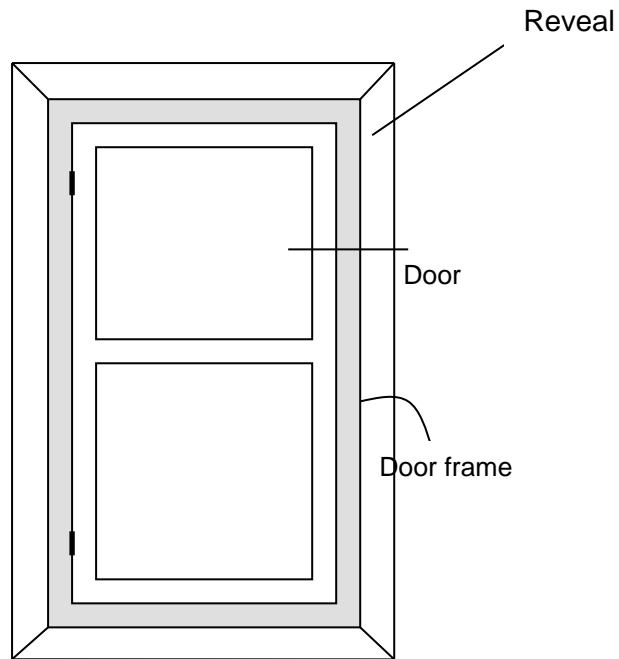

### Introduction

Your screen is going to be fitted within the reveal

If your door opens out (e.g. into the garden) then the screen is fitted on the inside of the door/building.

If your door opens inwards, the screen is fitted on the outside of the door/building


Once fitted the screen will pull either left to right or right to left (optional) to cover the opening once the door is open. The screen locks in place with the aid of a magnetic strip.

### Step 1 - Fitting the Head Cassette

Having determined whether the screen is fitted inside or outside, decide whether you wish the screen to pull from the left or right.

In this example it is assumed the door opens into the property so the screen is fitted to the outside. As viewed from the outside the screen is pulled closed from left to right so the head cassette is fitted to the left side of the reveal

Place the cassette against the wall, between floor and ceiling ensuring the handle bar with the handle faces in the direction you wish the screen to be pulled. Fix in place by screwing through the bottom and top tabs using the silver no. 6 1" screws and yellow rawl plugs

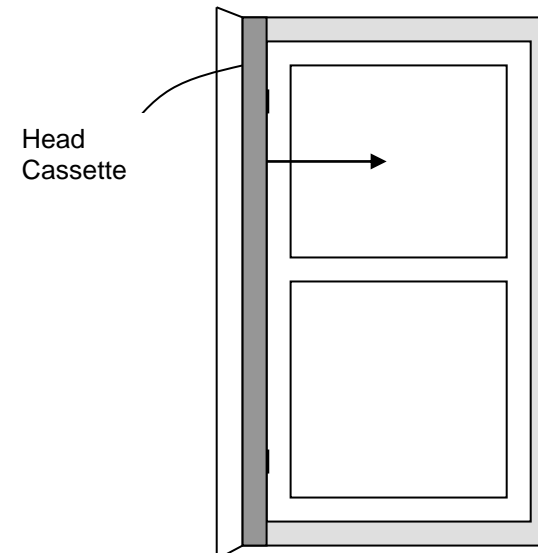


## Step 2 - Fitting the Top and Bottom Guides

Once the head cassette is fixed in place, the top and bottom guides can be fitted.

Locate the top guide onto the tab at the end of the cassette and push the guide towards the head as far as it will go. **Note:** ensure the open part of the guide faces downwards as per the diagram.

Once located, level the guide and secure with either the screws (black screws with the grey rawl plugs) or by bonding with glue or glazing tape. Screws should be fixed as per the diagram ensuring the heads are as flat as possible to avoid snagging the guides on the end of the handle bar. **Note:** If you do not have enough clearance to slide the closing channel over the end of the guides you will need to locate and fix the guides and closing **channel** at the same time.

Repeat for the bottom guide with the open part of the guide facing upwards.

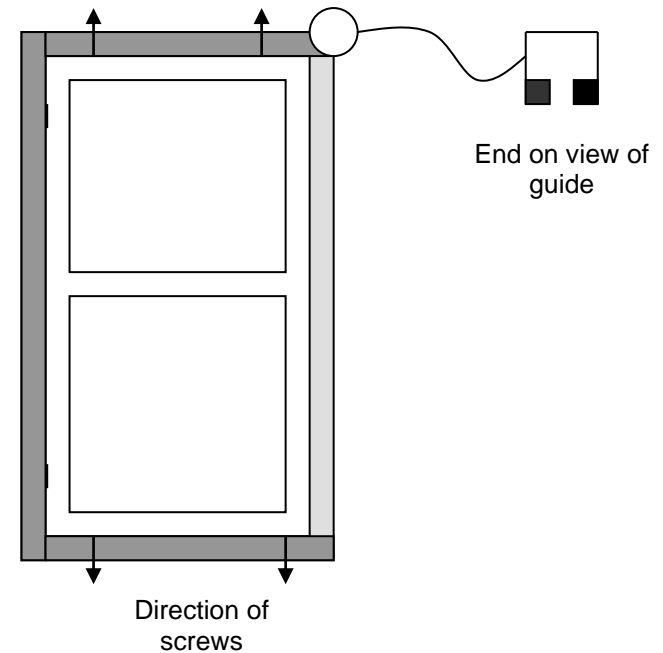

## Step 3 - Fitting the Closing Channel

The closing channel fits over the end of both guides.

When the screen is pulled across, the handle bar locates into the closing channel and is held in place by the magnetic strips on both surfaces.

Locate the closing channel by sliding it over the two guides and fit in place with the small, no 6 3/8" screws or by bonding with glue or glazing tape.

Once fitted test the screen to ensure it runs freely and locks in place.

